

1. Included Parts



1) Machine switch assembly
p/n: MMSM0PAC04



2) Air compressor switch assembly
p/n: MMSM0PAC042



3) Spare fuse



4) Spare bolts & nuts



5) USB drive (update)
p/n: MMSM0PAC045

2. Purpose of Update

This update enhances Marksman’s system protection against unexpected overcurrent conditions through component upgrades and circuit protection improvements.

3. Fuse Specification

Fuse: Littelfuse 314 Series — 15A @ 250VAC


Fuse holder: Littelfuse Shock-Safe Panel Mount — 20A @ 250V

4. Air Compressor Switch Assembly Replacement

As shown in figure below...

1. Open the original rear cabinet door.
2. Disconnect the red connector and remove the original door assembly.
3. Install the new assembly:
 - Connect connectors A and B.
4. Close and secure the door.

REPLACEMENT COMPLETE

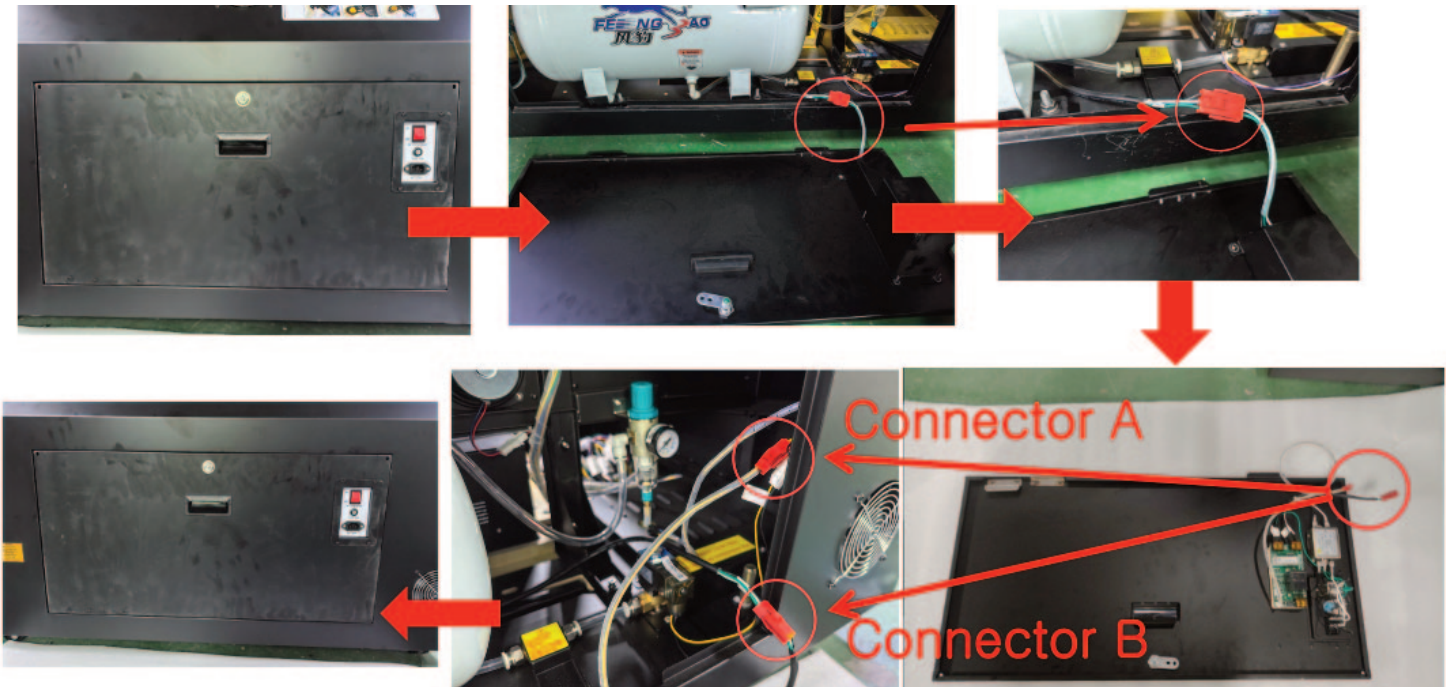


5. Machine Switch Assembly Replacement

As shown in figure below...

1. Loosen and remove the 4 mounting screws.
2. Disconnect:
 - Connector C
 - Ground connectors D and E (from computer)
3. Remove the original switch assembly.

4. Install the new assembly:
 - Reconnect connector C
 - Reattach ground connectors D and E
5. Secure with screws.

REPLACEMENT COMPLETE

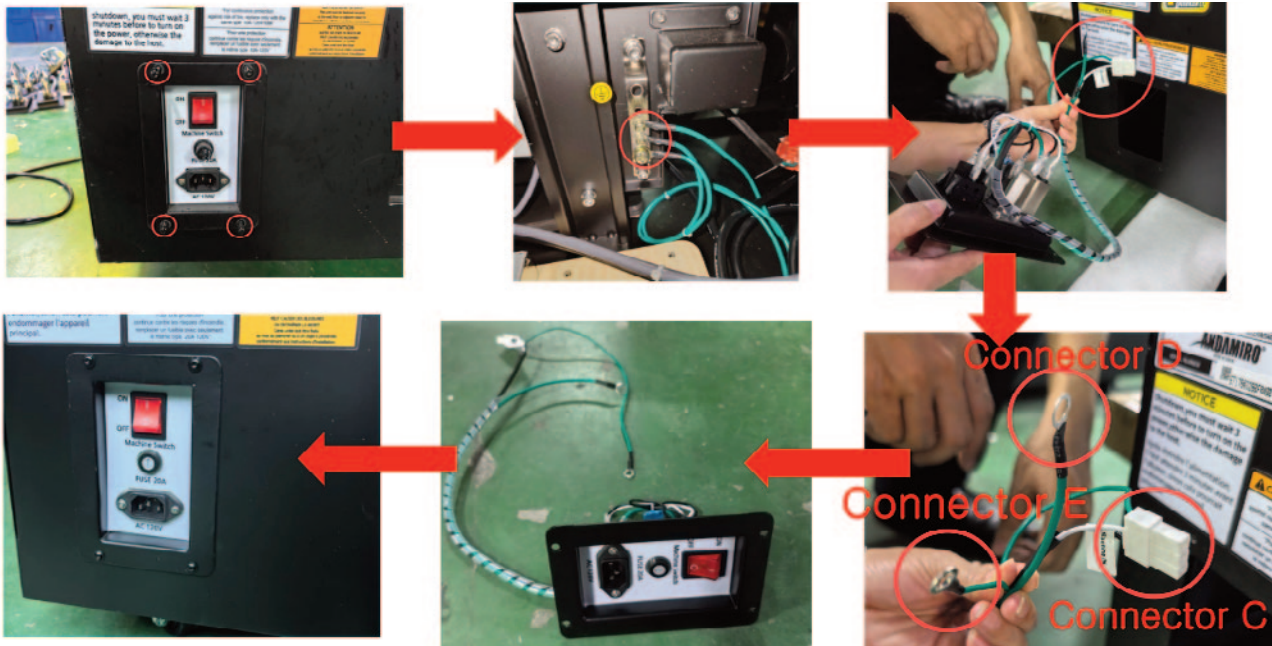

6. Software Update (USB)

As shown in figure at right...

1. Power on the machine.
2. Insert the provided USB drive into the host computer.
3. Press the **SERVICE** button to enter the **main menu**.
4. Select "Update from USB."
5. Press **TEST** button to begin the update.
6. Wait for completion — the system will return to the demo screen.
7. Confirm Marksman software version: **v1.0.43_2026.04.04_a**
8. Remove USB drive.

IMPORTANT!

- Do not power off machine during update.
- Do not remove USB drive until update is complete.



7. Disposal Instructions

- Dispose of all replaced components.
- Do not return the USB drive

***** PLEASE DISPOSE OF ORIGINAL PARTS.
DO NOT RETURN USB MEMORY *****

8. Why This Update Matters

This update is required to prevent system resets or interruptions caused by overcurrent conditions.

9. Support Contact

Andamiro USA – Service Team
service@andamirousa.com
(972) 445-9110, ext. 105

THANK YOU

